



Montageanleitung Türen 6...


MO_610T.pdf Stand 05/2024




Assembly instruction : doors 6...

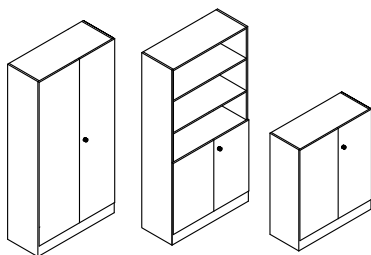

Sie benötigen dieses Werkzeug (tool) :




12 x A	6 x B	6 x C	1-2 x D
 6,3 x 16	 3,5 x 20		
500252	500220	565978	500332

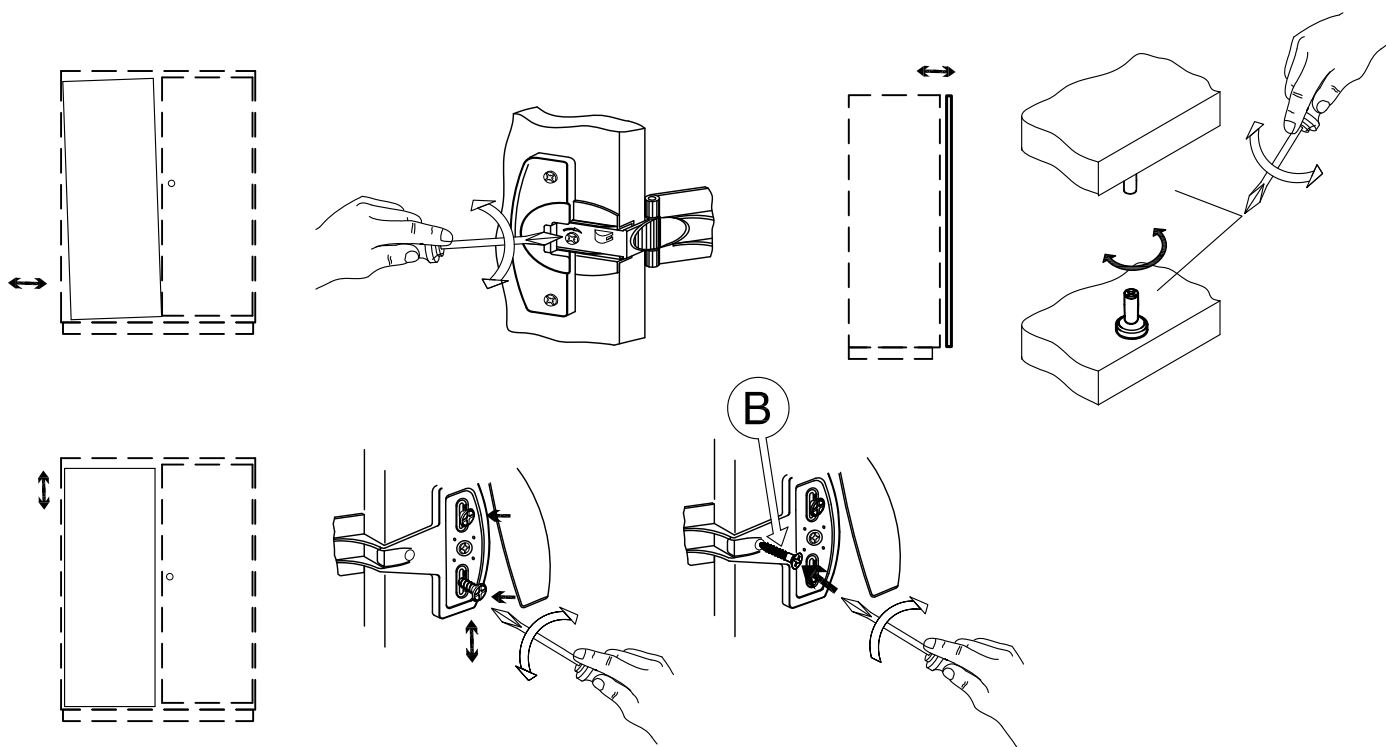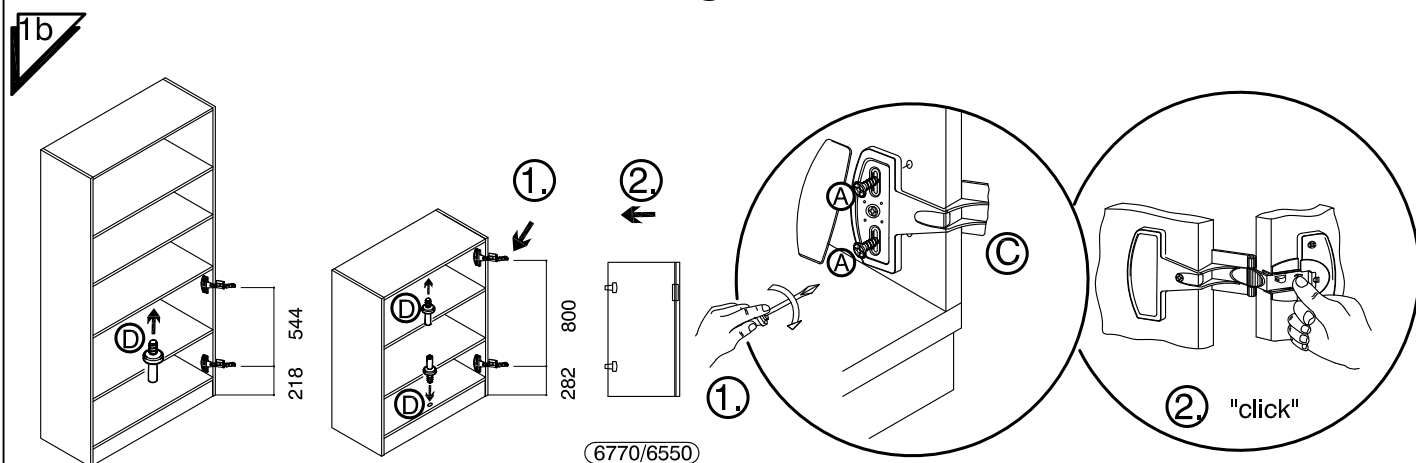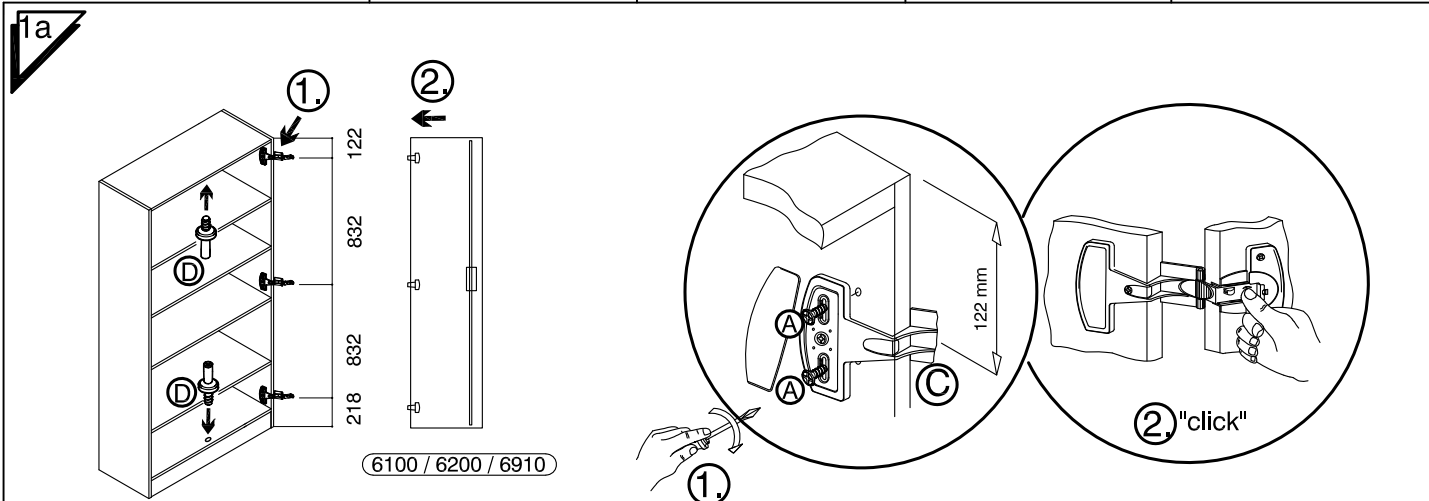




Montageanleitung :
Korpus – Regalserie M6.../M7.../M8...
Assembly instruction : corpus – shelves M6.../M7.../M8...

5

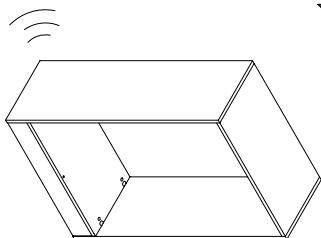


4 x G


7

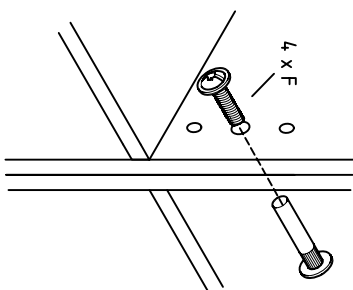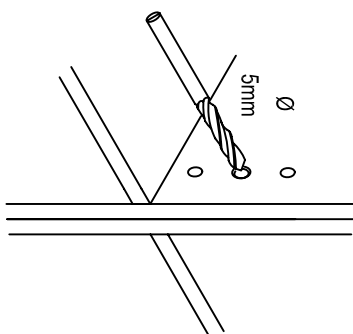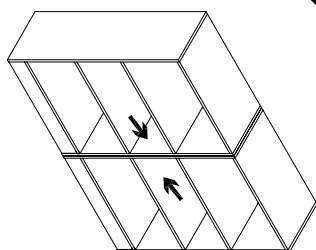



M 6500

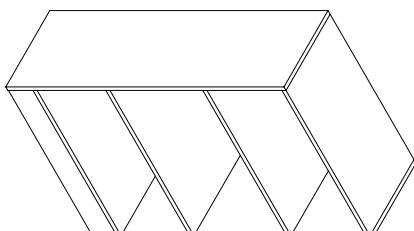


M 6050

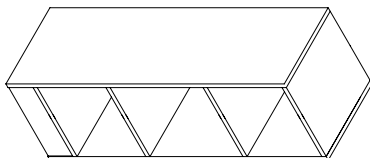

6

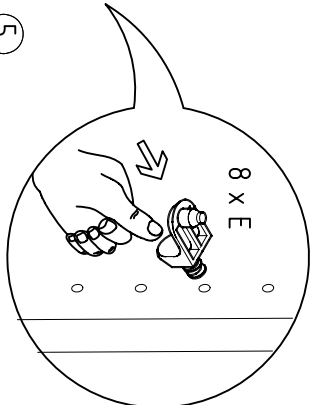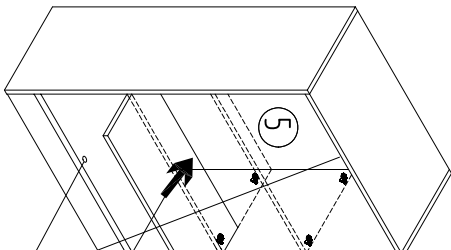




2 x H

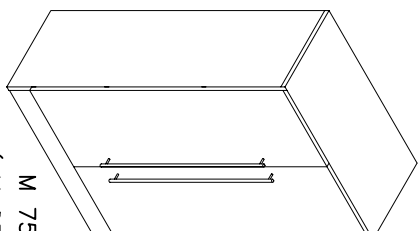


M 7550
(M 8550)

Inhalt Beschlagbeutel :
Fittings :

4 x A 	12 x B  (4 x 16 mm)	8 x C 	6 x D  (3,5 x 25 mm)
8 x E 	4 x F 	4 x G 	2 x H 

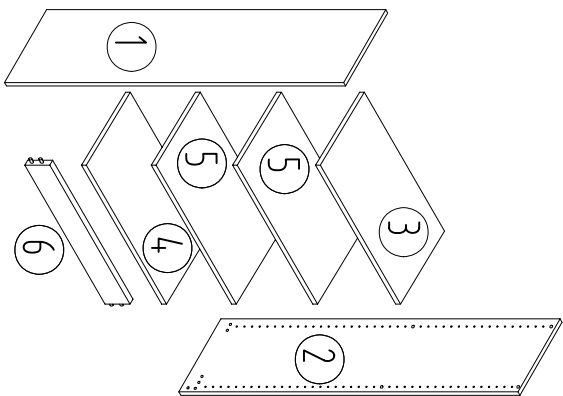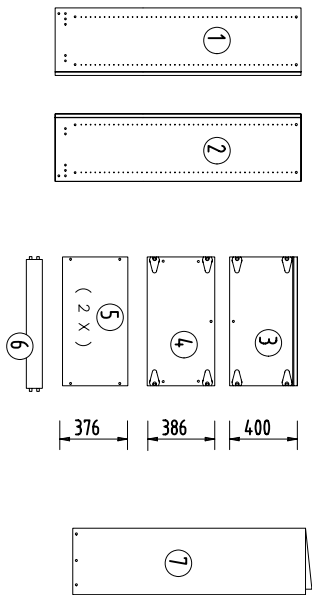


1

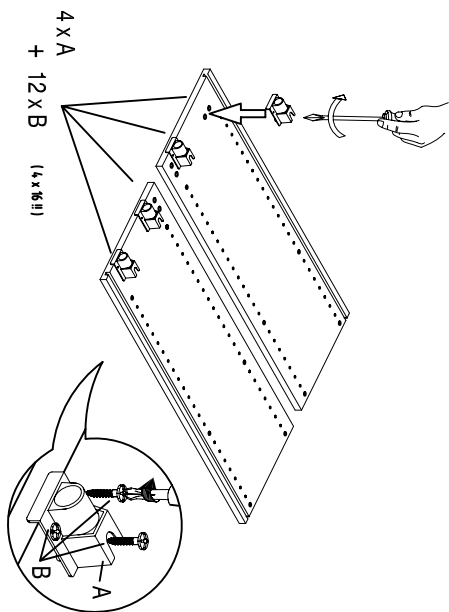


2

8 x C

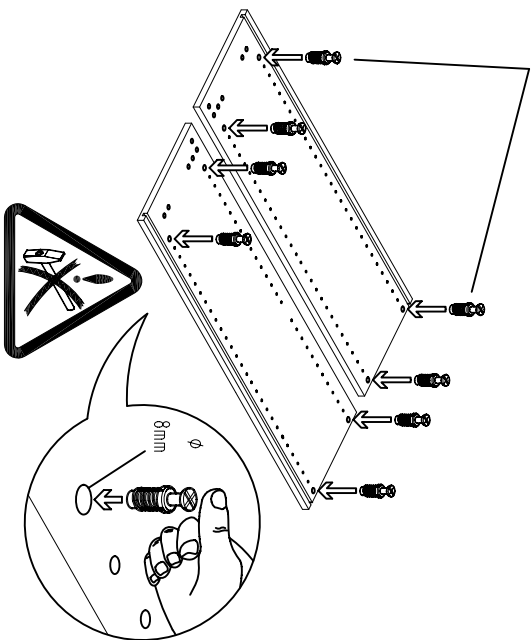

3

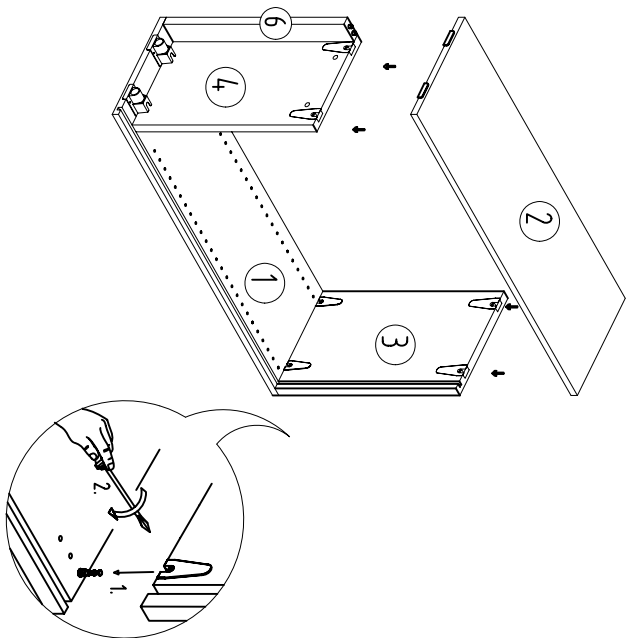

4

